

Ground	Component Side	01
Ground		02
+5 Volt		03
+5 Volt		04
-5 Volt		05
+12 Volt		06
Not Connected		07
Coin Counter P1		08
Lock out Coil P1		09
Speaker + (Positive)		10
Not Connected		11
Video Out RED		12
Video Out BLUE		13
Video Out Ground		14
Test Switch		15
Coin Switch P1		16
Start Player 1		17
UP Player 1		18
Down Player 1		19
Left Player 1		20
Right Player 1		21
Button A Player 1		22
Button B Player 1		23
Button C Player 1		24
Not Connected		25
Not Connected		26
Ground		27
Ground		28

Solder Side	A	Ground
	B	Ground
	C	+5 Volt
	D	+5 Volt
	E	-5 Volt
	F	+12 Volt
	H	Not Connected
	J	Coin Counter P2
	K	Lock out Coil P2
	L	Speaker - (Negative)
	M	Not Connected
	N	Video Out GREEN
	P	Video Out Sync.
	R	Service Switch
	S	Tilt Switch
	T	Coin Switch P2
	U	Start Player 2
	V	UP Player 2
	W	Down Player 2
	X	Left Player 2
	Y	Right Player 2
	Z	Button A Player 2
	A	Button B Player 2
	B	Button C Player 2
	C	Not Connected
	D	Not Connected
	E	Ground
	F	Ground