


REGISTRATION OF YOUR NAME

If your score is one of the top 5, you can register your name in the following manner.

Move Control Lever to select desired letter, then press Fire Button.

You can register up to 12 characters within 40 seconds.

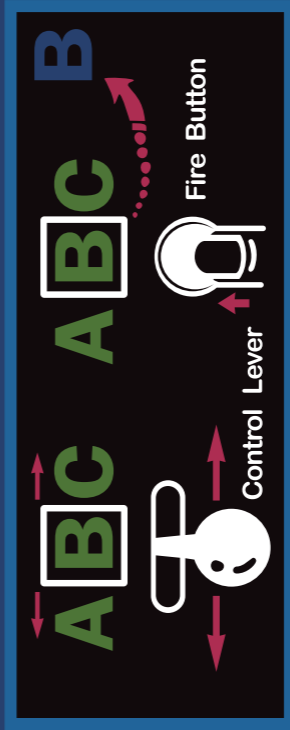

Nintendo



Cancels wrong letter



Registration finished or not wanted

C

M

Y

CM

MY

CY

CMY

K

