

# **WARNING**

**DO NOT DISCONNECT SOUND/SPEECH BOARD CONNECTOR (A6-J1) UNTIL THE +30V DC (LED, D25) ON THE A2 POWER SUPPLY BOARD HAS TURNED OFF.**

**A-22382**